
## SAF-S OR SAB-S INSTALLATION DIAGRAM W/ 4 ACTUATORS

SAF-S OR SAB-S (REAR VIEW W/ TEXT UP)

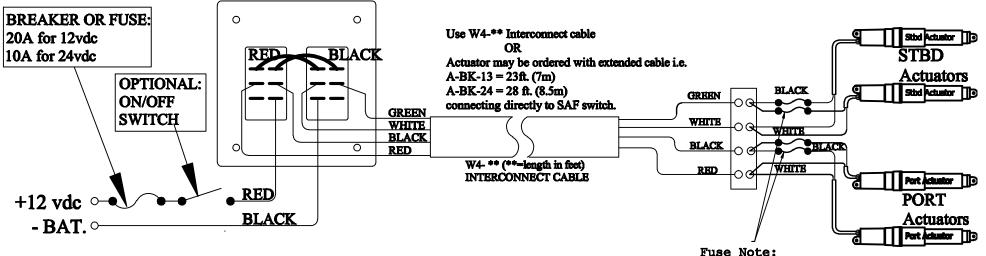

Fuse Note:
For 2 actuators per
tab applications, a
fuse must be attached
to each actuator's
black wire as shown.
Fuse size not to
exceed 10 amps for
12vdc and 5 amps for
24vdc. Please call
Lectrotab for fuse
sizing (888-532-8768).