


CHX Bezel Removal Instructions Single and Twin Top Mount Controls


Separating a Bezel Cover from a Bezel Base in a Mounted Configuration

1. Side view of the control assembly

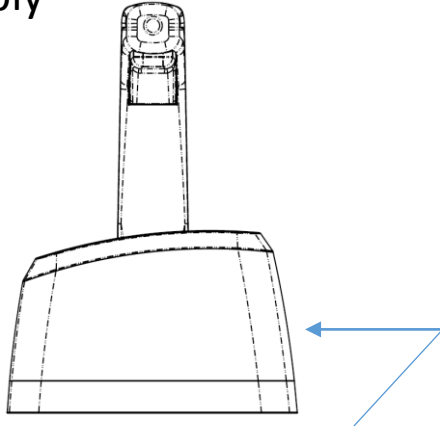


Apply force to the forward face of the bezel until Tab 1 disengages

2. Side view of the control assembly

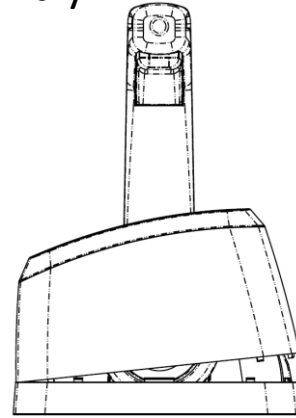


The forward portion of the bezel will tilt up

3. Side view of the control assembly

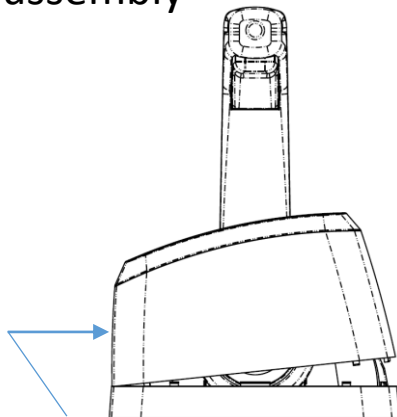

Apply force to the rearward face of the bezel until Tab 2 disengages


4. Side view of the control assembly

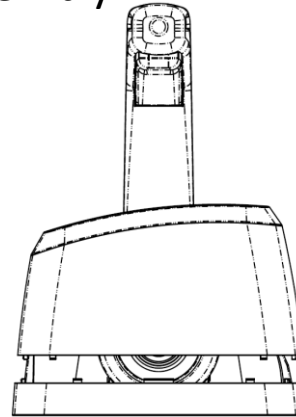


The bezel cover will then separate from the bezel base

Separating a Bezel Cover from a Bezel Base in an Unmounted Configuration


1. Side view of the bezel assembly

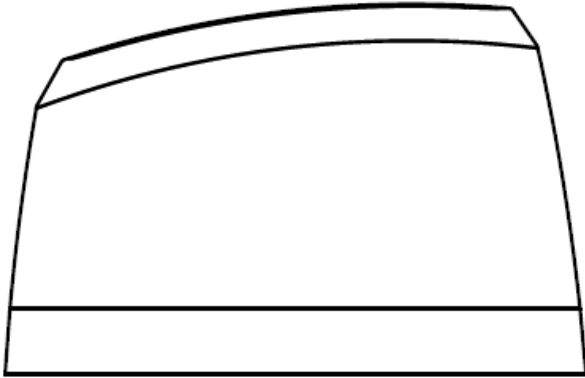

2. Cut-away view of the bezel assembly

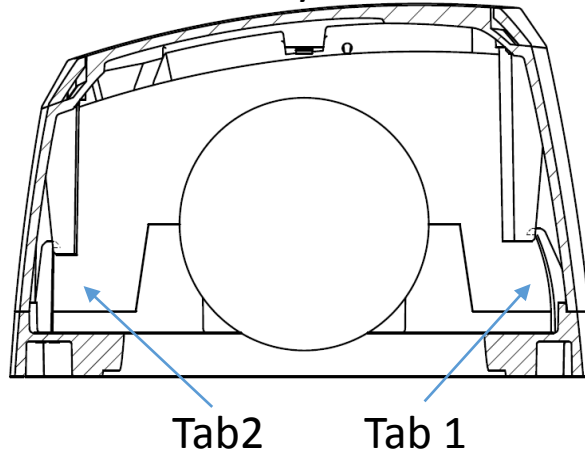


3. ISO view of the bezel assembly

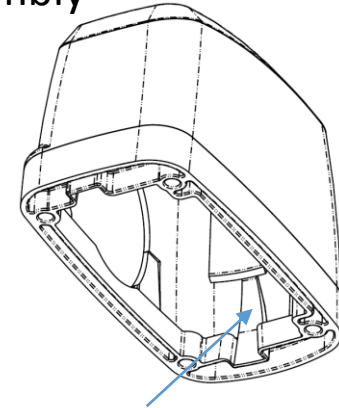


Manually release Tab 1 from the underside of the bezel

4. Side/cut-away view of the bezel assembly

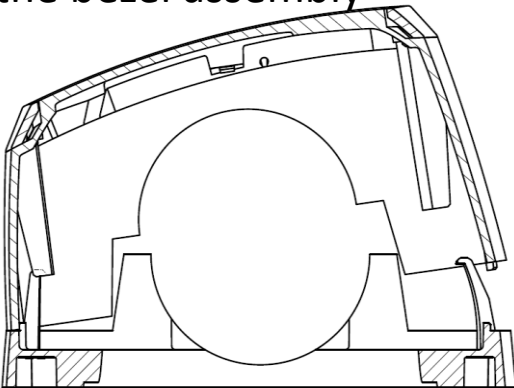


The forward portion of the bezel can then be tilted up

5. ISO view of the bezel assembly

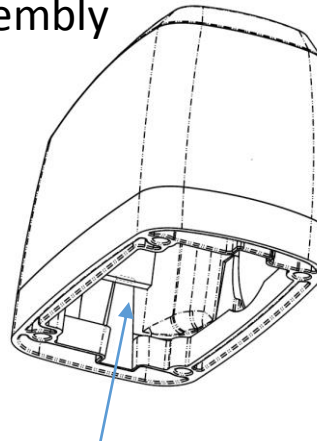

Manually release Tab 2 from the underside of the bezel

6. Side view of the bezel assembly

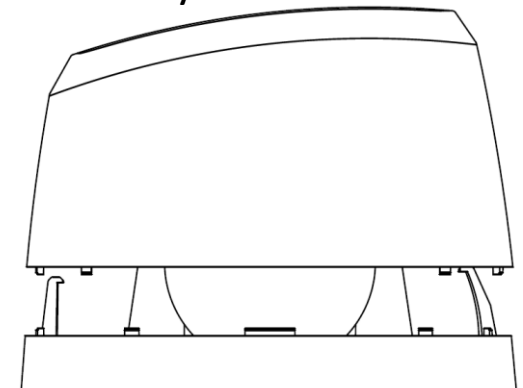

The bezel cover can then be separated from the bezel base