

## AutoAnchor Sensor Wiring - Use the Plug In Sensor Connector Cables

## ■ Field Connectors for Plug - Used if the sensor or console does not have plugs.

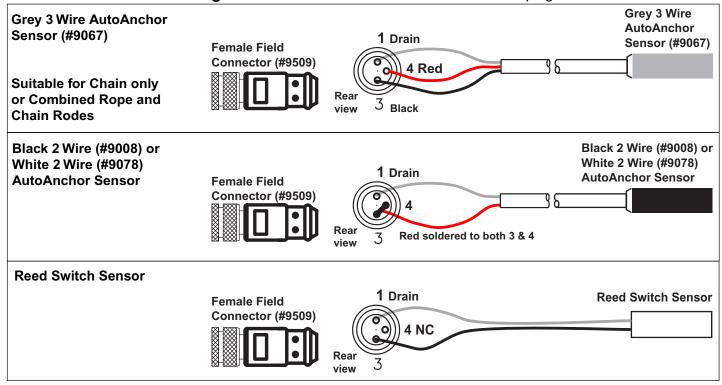

## **■** Sensor Cable Joins

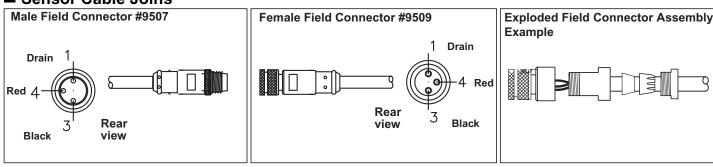

## Cable Connections without Plugs

If the AutoAnchor plug in connectors are not used the cable joins must be solder spliced and sealed in heat shrink tubing. The entire splice must be water proof.

